

Reed-Solomon Library Programming Interface

Thomas Gleixner

`tglx@linutronix.de`

Reed-Solomon Library Programming Interface

by Thomas Gleixner

Copyright © 2004 Thomas Gleixner

This documentation is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License version 2 as published by the Free Software Foundation.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

For more details see the file COPYING in the source distribution of Linux.

Table of Contents

1. Introduction.....	1
2. Known Bugs And Assumptions	2
3. Usage	3
3.1. Initializing	3
3.2. Encoding	3
3.3. Decoding	3
3.3.1. Decoding with syndrome calculation, direct data correction	4
3.3.2. Decoding with syndrome given by hardware decoder, direct data correction.....	4
3.3.3. Decoding with syndrome given by hardware decoder, no direct data correction.....	5
3.4. Cleanup	5
4. Structures	6
struct rs_control.....	6
5. Public Functions Provided	8
free_rs.....	8
init_rs	8
encode_rs8	9
decode_rs8	10
encode_rs16	12
decode_rs16	13
6. Credits.....	15

Chapter 1. Introduction

The generic Reed-Solomon Library provides encoding, decoding and error correction functions.

Reed-Solomon codes are used in communication and storage applications to ensure data integrity.

This documentation is provided for developers who want to utilize the functions provided by the library.

Chapter 2. Known Bugs And Assumptions

None.

Chapter 3. Usage

This chapter provides examples how to use the library.

3.1. Initializing

The init function `init_rs` returns a pointer to a rs decoder structure, which holds the necessary information for encoding, decoding and error correction with the given polynomial. It either uses an existing matching decoder or creates a new one. On creation all the lookup tables for fast en/decoding are created. The function may take a while, so make sure not to call it in critical code paths.

```
/* the Reed Solomon control structure */
static struct rs_control *rs_decoder;

/* Symbolsize is 10 (bits)
 * Primitve polynomial is x^10+x^3+1
 * first consecutive root is 0
 * primitve element to generate roots = 1
 * generator polinomial degree (number of roots) = 6
 */
rs_decoder = init_rs (10, 0x409, 0, 1, 6);
```

3.2. Encoding

The encoder calculates the Reed-Solomon code over the given data length and stores the result in the parity buffer. Note that the parity buffer must be initialized before calling the encoder.

The expanded data can be inverted on the fly by providing a non zero inversion mask. The expanded data is XOR'ed with the mask. This is used e.g. for FLASH ECC, where the all 0xFF is inverted to an all 0x00. The Reed-Solomon code for all 0x00 is all 0x00. The code is inverted before storing to FLASH so it is 0xFF too. This prevent's that reading from an erased FLASH results in ECC errors.

The databytes are expanded to the given symbol size on the fly. There is no support for encoding continuous bitstreams with a symbol size != 8 at the moment. If it is necessary it should be not a big deal to implement such functionality.

```
/* Parity buffer. Size = number of roots */
uint16_t par[6];
/* Initialize the parity buffer */
memset(par, 0, sizeof(par));
/* Encode 512 byte in data8. Store parity in buffer par */
encode_rs8 (rs_decoder, data8, 512, par, 0);
```

3.3. Decoding

The decoder calculates the syndrome over the given data length and the received parity symbols and corrects errors in the data.

If a syndrome is available from a hardware decoder then the syndrome calculation is skipped.

The correction of the data buffer can be suppressed by providing a correction pattern buffer and an error location buffer to the decoder. The decoder stores the calculated error location and the correction bitmask in the given buffers. This is useful for hardware decoders which use a weird bit ordering scheme.

The databytes are expanded to the given symbol size on the fly. There is no support for decoding continuous bitstreams with a symbolsize $\neq 8$ at the moment. If it is necessary it should be not a big deal to implement such functionality.

3.3.1. Decoding with syndrome calculation, direct data correction

```
/* Parity buffer. Size = number of roots */
uint16_t par[6];
uint8_t data[512];
int numerr;
/* Receive data */
.....
/* Receive parity */
.....
/* Decode 512 byte in data8.*/
numerr = decode_rs8 (rs_decoder, data8, par, 512, NULL, 0, NULL, 0, NULL);
```

3.3.2. Decoding with syndrome given by hardware decoder, direct data correction

```
/* Parity buffer. Size = number of roots */
uint16_t par[6], syn[6];
uint8_t data[512];
int numerr;
/* Receive data */
.....
/* Receive parity */
.....
/* Get syndrome from hardware decoder */
.....
/* Decode 512 byte in data8.*/
numerr = decode_rs8 (rs_decoder, data8, par, 512, syn, 0, NULL, 0, NULL);
```

3.3.3. Decoding with syndrome given by hardware decoder, no direct data correction.

Note: It's not necessary to give data and received parity to the decoder.

```

/* Parity buffer. Size = number of roots */
uint16_t par[6], syn[6], corr[8];
uint8_t  data[512];
int numerr, errpos[8];
/* Receive data */
.....
/* Receive parity */
.....
/* Get syndrome from hardware decoder */
.....
/* Decode 512 byte in data8.*/
numerr = decode_rs8 (rs_decoder, NULL, NULL, 512, syn, 0, errpos, 0, corr);
for (i = 0; i < numerr; i++) {
do_error_correction_in_your_buffer(errpos[i], corr[i]);
}

```

3.4. Cleanup

The function `free_rs` frees the allocated resources, if the caller is the last user of the decoder.

```

/* Release resources */
free_rs(rs_decoder);

```

Chapter 4. Structures

This chapter contains the autogenerated documentation of the structures which are used in the Reed-Solomon Library and are relevant for a developer.

struct rs_control

LINUX

Kernel Hackers Manual November 2007

Name

struct rs_control — rs control structure

Synopsis

```
struct rs_control {
    int mm;
    int nn;
    uint16_t * alpha_to;
    uint16_t * index_of;
    uint16_t * genpoly;
    int nroots;
    int fcr;
    int prim;
    int iprim;
    int gfpoly;
    int users;
    struct list_head list;
};
```

Members

mm

Bits per symbol

nn

Symbols per block (= (1<<mm)-1)

alpha_to

log lookup table

index_of

Antilog lookup table

genpoly

Generator polynomial

nroots

Number of generator roots = number of parity symbols

fcf

First consecutive root, index form

prim

Primitive element, index form

iprim

prim-th root of 1, index form

gfpoly

The primitive generator polynomial

users

Users of this structure

list

List entry for the rs control list

Description

Chapter 5. Public Functions Provided

This chapter contains the autogenerated documentation of the Reed-Solomon functions which are exported.

free_rs

LINUX

Kernel Hackers Manual November 2007

Name

`free_rs` — Free the rs control structure, if its not longer used

Synopsis

```
void free_rs (struct rs_control * rs);
```

Arguments

rs

the control structure which is not longer used by the caller

Description

init_rs

LINUX

Kernel Hackers Manual November 2007

Name

`init_rs` — Find a matching or allocate a new rs control structure

Synopsis

```
struct rs_control * init_rs (int symsize, int gfpoly, int fc, int prim, int nroots);
```

Arguments

symsize

the symbol size (number of bits)

gfpoly

the extended Galois field generator polynomial coefficients, with the 0th coefficient in the low order bit. The polynomial must be primitive;

fc

the first consecutive root of the rs code generator polynomial in index form

prim

primitive element to generate polynomial roots

nroots

RS code generator polynomial degree (number of roots)

Description

encode_rs8

LINUX

Kernel Hackers Manual November 2007

Name

encode_rs8 — Calculate the parity for data values (8bit data width)

Synopsis

```
int encode_rs8 (struct rs_control * rs, uint8_t * data, int len, uint16_t *  
par, uint16_t invmsk);
```

Arguments

rs

the rs control structure

data

data field of a given type

len

data length

par

parity data, must be initialized by caller (usually all 0)

invmsk

invert data mask (will be xored on data)

Description

The parity uses a uint16_t data type to enable symbol size > 8. The calling code must take care of encoding of the syndrome result for storage itself.

Description

The parity uses a uint16_t data type to enable symbol size > 8. The calling code must take care of encoding of the syndrome result for storage itself.

decode_rs8

LINUX

Name

`decode_rs8` — Decode codeword (8bit data width)

Synopsis

```
int decode_rs8 (struct rs_control * rs, uint8_t * data, uint16_t * par, int
len, uint16_t * s, int no_eras, int * eras_pos, uint16_t invmsk, uint16_t *
corr);
```

Arguments

rs

the rs control structure

data

data field of a given type

par

received parity data field

len

data length

s

syndrome data field (if NULL, syndrome is calculated)

no_eras

number of erasures

eras_pos

position of erasures, can be NULL

invmsk

invert data mask (will be xored on data, not on parity!)

corr

buffer to store correction bitmask on *eras_pos*

Description

The syndrome and parity uses a `uint16_t` data type to enable symbol size > 8. The calling code must take care of decoding of the syndrome result and the received parity before calling this code.

Description

The syndrome and parity uses a `uint16_t` data type to enable symbol size > 8. The calling code must take care of decoding of the syndrome result and the received parity before calling this code.

encode_rs16

LINUX

Kernel Hackers Manual November 2007

Name

`encode_rs16` — Calculate the parity for data values (16bit data width)

Synopsis

```
int encode_rs16 (struct rs_control * rs, uint16_t * data, int len, uint16_t *
par, uint16_t invmsk);
```

Arguments

rs

the rs control structure

data

data field of a given type

len

data length

par

parity data, must be initialized by caller (usually all 0)

invmsk

invert data mask (will be xored on data, not on parity!)

Description

Each field in the data array contains up to symbol size bits of valid data.

Description

Each field in the data array contains up to symbol size bits of valid data.

decode_rs16

LINUX

Kernel Hackers Manual November 2007

Name

decode_rs16 — Decode codeword (16bit data width)

Synopsis

```
int decode_rs16 (struct rs_control * rs, uint16_t * data, uint16_t * par, int
len, uint16_t * s, int no_eras, int * eras_pos, uint16_t invmsk, uint16_t *
corr);
```

Arguments

rs

the rs control structure

data

data field of a given type

par
received parity data field

len
data length

s
syndrome data field (if NULL, syndrome is calculated)

no_eras
number of erasures

eras_pos
position of erasures, can be NULL

invmsk
invert data mask (will be xored on data, not on parity!)

corr
buffer to store correction bitmask on eras_pos

Description

Each field in the data array contains up to symbol size bits of valid data.

Description

Each field in the data array contains up to symbol size bits of valid data.

Chapter 6. Credits

The library code for encoding and decoding was written by Phil Karn.

Copyright 2002, Phil Karn, KA9Q

May be used under the terms of the GNU General Public License (GPL)

The wrapper functions and interfaces are written by Thomas Gleixner

Many users have provided bugfixes, improvements and helping hands for testing. Thanks a lot.

The following people have contributed to this document:

Thomas Gleixner<tglx@linutronix.de>